#### Material in This Set

## Material in This Set

These slides do not give detailed coverage of the material. See class notes and solved problems (last page) for more information.

Text covers multiple-issue machines in Chapter 4, but does not cover most of the topics presented here.

## Outline

- Routes to Higher Performance (From 5-Stage Scalar MIPS)
- Superscalar Machines
- VLIW Machines
- Short Vector (SIMD) Instructions
- Deep Pipelining
- Parallelism

Sample Problems ≫ Easy Superscalar Processor Problems

### Sample Problems

Problems and solutions on https://www.ece.lsu.edu/ee4720/prev.html.

#### Easy Superscalar Processor Problems

Show execution of code on a two-way superscalar MIPS with one memory port. One straight-line code fragment, one with loop. Show CPI of given execution. 2017 Final Exam Problem 2.

Show execution of loop on a 4-way superscalar implementation. 2022 Final Exam Problem 1 (last part).

On a 2-way superscalar MIPS: (a) Show execution of a code fragment consisting only of loads and stores. (b) Show execution of a code fragment with a single branch. (Part (c) is of medium difficulty.) 2018 Final Exam Problem 1.

Two-way superscalar. Part (a) add a bypass. (b) logic to detect a simple stall condition. (Parts (c) and (d) are of medium difficulty.) 2019 Final Exam Problem 1.

Two-way superscalar. Part (c) Show execution of code with a branch. 2015 Final Exam Problem 2.

Part (b) Show execution on a 4-way implementation without branch prediction (and without an illustration). (c) With perfect pred. 2012 Final Exam Problem 3.

#### Medium-Difficulty Superscalar Problems

Complete the design of a 2-way superscalar processor with one early writeback port. 2021 Final Exam Problem 1.

Design the control logic for the early-writeback 2-way superscalar from the 2021 Final Exam. 2022 Final Exam Problem 1.

Complete the design of a 2-way superscalar MIPS with a second-chance ALU to avoid some stalls. 2020 Final Exam Problem 1.

Two-way superscalar MIPS: (c) Avoid stall and bypass for move-like instructions. (d) Arguments for and against this handling of move-like instructions. (Parts (a) and (b) are easy.) 2019 Final Exam Problem 1.

Two 2-way superscalar MIPS: (c) Hardware for branch in slot 1. 2018 Final Exam Problem 1.

Two 2-way superscalar MIPS: (a) Control logic for stall. (b) Special case bypass. 2013 Final Exam Problem 2.

Two 2-way superscalar MIPS: design datapath for shared store. Stall logic. Shared load. 2016 Final Exam Problem 1.

Fused add. 2015 Final Exam Problem 1.

- (a) Logic for dependence within stage. (b) add/sw group. 2014 Final Exam Problem 2.
- (a) 2-way superscalar v. 10-stage impl. 2014 Midterm Exam Problem 6.
- (a) Logic for dependence within stage. (b) add/lw group. 2013 Final Exam Problem 2.

# Routes to Higher Performance


## We Are Here

The elegant and efficient five-stage RISC implementation.

We have the fastest device technology available (assume).

We have the most talented digital logic designers (assume).

What if our five-stage implementation ... is still not fast enough?

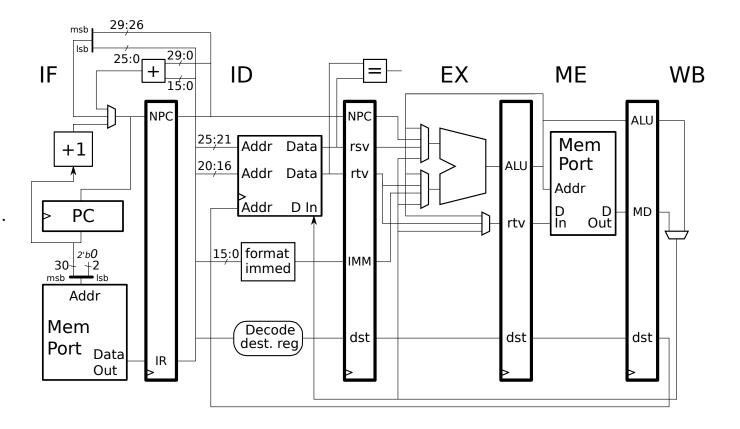

Faster Implementations — Higher Typical and Peak Performance

Deeply Pipelined Implementations: More stages : higher  $\phi$ .

Multiple Issue, Superscalar Implementations: Handle > 1 insn per cycle.

Short Vector (SIMD) Instructions

Smarter Implementations — Higher Typical Performance, But Same Peak Performance

Dynamic Scheduling

Branch Prediction

Parallel Implementations — As much performance as you can afford\*!

Multi-Core Chips, Multiprocessors

Computing Clusters

Distributed Systems

<sup>\*</sup> Parallelization costs may apply. Results not guaranteed. Not all code is parallelizable, and not all parallelizable code is parallizable by all programmers. Code may run slower, may be more difficult to debug, and harbor more latent bugs. Parallelization can be frustrating. Not responsible for broken keyboards, monitors, etc.

#### Multiple Issue ≫ Definition

#### Multiple Issue

## Multiple-Issue Machine:

A processor that can sustain fetch and execution of more than one instruction per cycle.

#### n-Way Superscalar Processor:

A multiple issue machine that can sustain execution of n > 1 instructions per cycle.

#### Scalar (Single-Issue) Processor:

A processor that can sustain execution of at most one instruction per cycle. A neologism for the five-stage MIPS implementation we have been working with.

#### Sustain Execution at n IPC:

Achieve an instruction throughput of n IPC for some code fragment ...

... written by a friendly programmer ...

... to avoid cache misses and otherwise avoid stalls.

Multiple Issue ≫ Types of Multiple Issue Machines

# Types of Multiple Issue Machines

### Superscalar Processor:

A multiple-issue machine that implements a conventional ISA (such as MIPS and Intel 64).

Code need not be recompiled.

General-purpose processors were superscalar starting in early 1990's.

#### VLIW Processor:

A multiple-issue machine that implements a VLIW ISA ...
... in which simultaneous execution considered. (More later.)

Since VLIW ISAs are novel, code must be re-compiled.

Idea developed in early 1980's, ...

- $\dots$  so far used in special-purpose and still born commercial machines,  $\dots$
- ... and was used in Intel's ill-fated next-generation processor, Itanium.

Superscalar Machines  $\gg$  Relationship to Scalar Implementations


# Superscalar Machines

*n*-Way Superscalar Machine Construction

Start with a scalar, a.k.a. single-issue, machine.

Duplicate hardware so that most parts can handle n instructions per cycle.

Don't forget about control and data hazards.

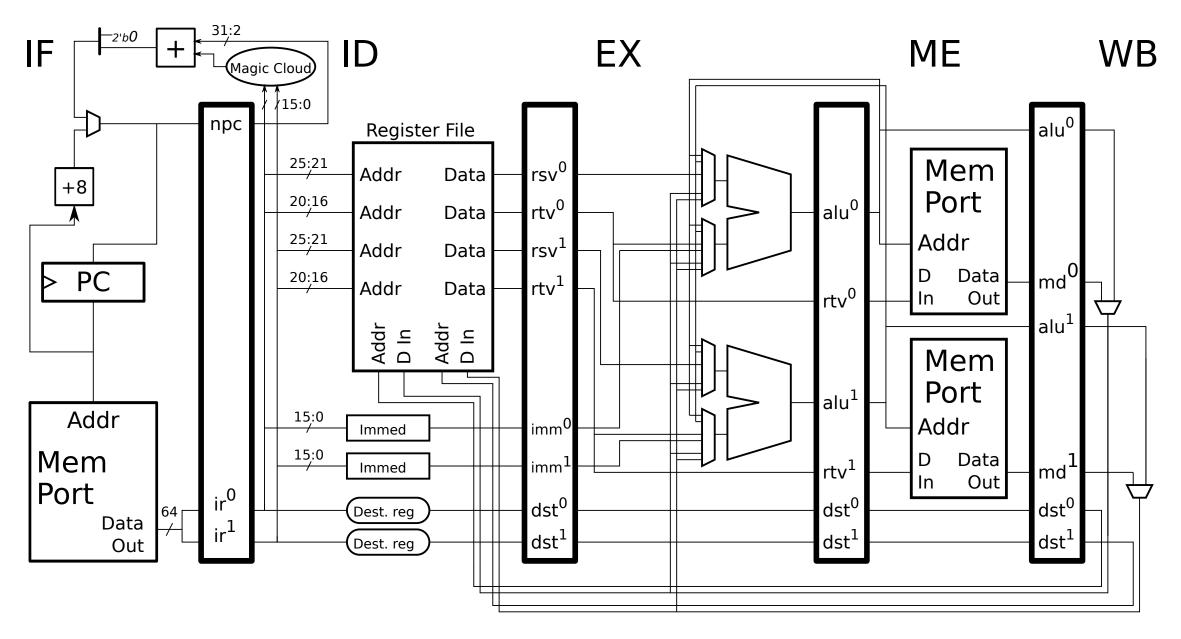

Superscalar Machines ≫ Execution of simple code on 2-way SS MIPS:

## Stage-Related Terminology

Each stage has n slots, numbered  $0, 1, \ldots$ 

#### Each slot holds one instruction.


Superscript on stage label indicates slot number.

Superscripts often omitted for brevity.

Execution of simple code on 2-way SS MIPS:

```
Ox1000: # Cycle 0 1 2 3 4 5 6 add R1, r2, r3 IF^0 ID^0 EX^0 ME^0 WB^0 sub r4, r5, r6 IF^1 ID^1 EX^1 ME^1 WB^1 or R7, R1, r8 IF^0 ID^0 EX^0 ME^0 WB^0 and r9, R7, r10 IF^1 ID^1 ---> EX^1 ME^1 WB^1 # Cycle 0 1 2 3 4 5 6
```

Note that the stall in cycle 2 would not occur on a scalar MIPS.

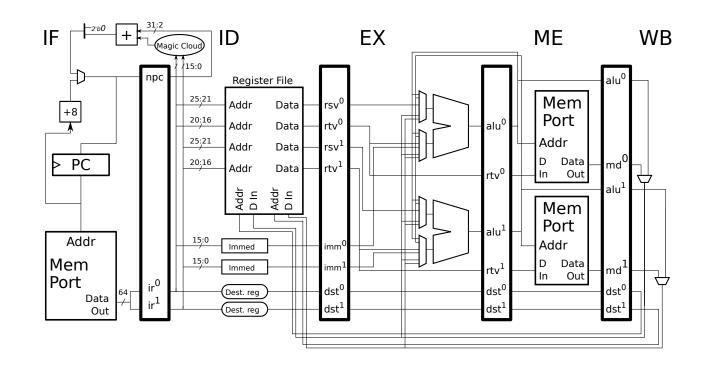

Superscalar Machines  $\gg$  Stalls in Superscalar Implementations

Stalls in Superscalar Implementations

As before, stall for true data dependencies...

... but now there are more of them.

Stall for structural hazards. (See examples further ahead.)

Stall to keep instructions in program order.

Program-order stalls make control logic much simpler.

See example on next slide.

Superscalar Machines >> Stalls in Superscalar Implementations >> Example: stall to maintain program order

Example of stalling to keep instructions in program order.

In the example below xor is stalled to keep instructions in order.

```
0x1000: # Cycle
                                                                              5
                                                                                       6
                              {\tt IF}^0 \quad {\tt ID}^0 \quad {\tt EX}^0 \quad {\tt ME}^0
 or R7, r1, r8
 and r9, R7, r10 IF<sup>1</sup> ID<sup>1</sup>
                                                  ---> EX^1
                                                                             \mathtt{WB}^1
                                                                    \mathtt{EX}^0
 xor r2, r3, r4
                                                                             \mathtt{ME}^0
                                                                                       WB^0
                                                                    \mathtt{EX}^1
                                                                             \mathtt{ME}^1
 add r5, r6, r8
                                                   ---> ID<sup>1</sup>
```


The and stalls due to a data dependence.

The add stalls because in cycle 2 ID<sup>1</sup> is occupied by and.

The xor stalls to keep the instructions in ID in program order:

In cycle 2:  $ID^0$  is empty and  $ID^1$  holds and.

In cycle 3: ID<sup>0</sup> holds xor and ID<sup>1</sup> holds add.

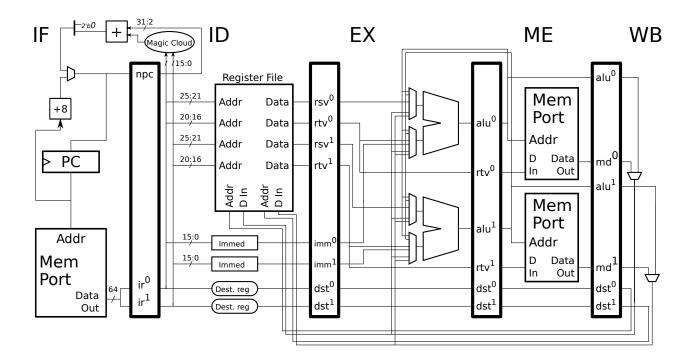


Superscalar Machines > Comparison of scalar, 2-way- and 4-way-superscalar execution.

Comparison of scalar, 2-way- and 4-way-superscalar execution.

```
0x1000: # Cycle 0
                                                                                      -- Scalar
 add R1, r2, r3 IF ID
                                       ΕX
                                                ME
                                                        WB
 sub r4, r5, r6
                                         ID
                                                EX
                                                       ME
                                                               WB
                                         IF
                                                        EX
                                                               ME
 or R7, R1, r8
                                                ID
                                                                      WB
                                                IF
 and r9, R7, r10
                                                        ID
                                                               ΕX
                                                                      ME
                                                                              WB
0x1000: # Cycle 0
                                                                                      -- 2-way
                         \mathtt{IF}^0 \mathtt{ID}^0 \mathtt{EX}^0
                                                        \mathtt{WB}^0
 add R1, r2, r3
                                         \mathsf{E}\mathsf{X}^1
 sub r4, r5, r6 IF^1
                                 {\sf ID}^1
                                                        \mathtt{WB}^1
                                                \mathtt{EX}^0
                                 \mathtt{IF}^0
                                        \mathtt{ID}_0
                                                        \mathtt{ME}^0
                                                               \mathtt{WB}^0
 or R7, R1, r8
                                         {\tt ID}^1
                                                ---> EX^1
                                 {\tt IF}^1
                                                               \mathtt{ME}^1
 and r9, R7, r10
                                                                      \mathtt{WB}^1
0x1000: # Cycle 0
                                                                                      -- 4-way
                         \mathtt{IF}^0 \mathtt{ID}^0 \mathtt{EX}^0 \mathtt{ME}^0
 add R1, r2, r3
 sub r4, r5, r6 IF^1 ID^1
                                         \mathsf{EX}^1
                                                \mathtt{ME}^1
 or R7, R1, r8 IF^2 ID^2
                                         ---> \mathsf{EX}^2
                                                               \mathtt{WB}^2
 and r9, R7, r10 IF^3
                                                               \mathtt{ME}^3
```

For this example 4-way does not help.

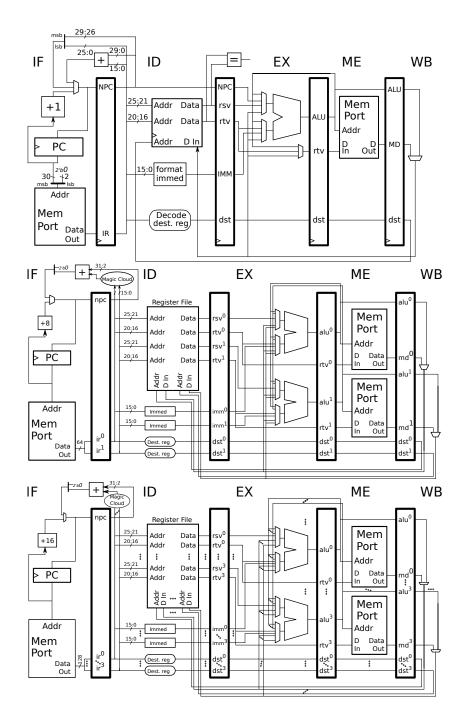

Superscalar Machines  $\gg$  Superscalar Challenges

# Superscalar Challenges

Register File

Scalar: 2 reads, 1 write per cycle.

n-way: 2n reads, n writes per cycle.

Dependency Checking and Bypass Paths For ALU Instructions

Scalar, about 4 comparisons per cycle.

n-way, about  $n(2(2n+n-1)=6n^2-2n$  comparisons.

Loads-Use Stalls

Scalar, only following instruction would have to stall (if dependent).

n-way, up to the next 2n-1 instructions would have to stall (if dependent).

Superscalar Machines  $\gg$  Superscalar Challenges

# Instruction Fetch

Memory system may be limited to aligned fetches ...
... for example, if branch target is 0x1114 ...
... instructions starting at 0x1110 may be fetched (and the first ignored) ...
... wasting fetch bandwidth.

Superscalar Machines  $\gg$  Typical Superscalar Processor Characteristics

## Typical Superscalar Processor Characteristics

#### Instruction Fetch

Instructions fetched in groups, which must be aligned in some systems.

Unneeded instructions ignored.

### Instruction Decode (ID)

Entire group must leave ID before next group (even 1 insn) can enter.

#### Execution


Not all hardware is duplicated ...

... and therefore some instruction pairs cause stalls.

For example, early processors could simultaneously start one floating-point and one integer instruction ...

... but could not simultaneously start two integer instructions.

Example: 2-Way Superscalar MIPS with One Memory Port

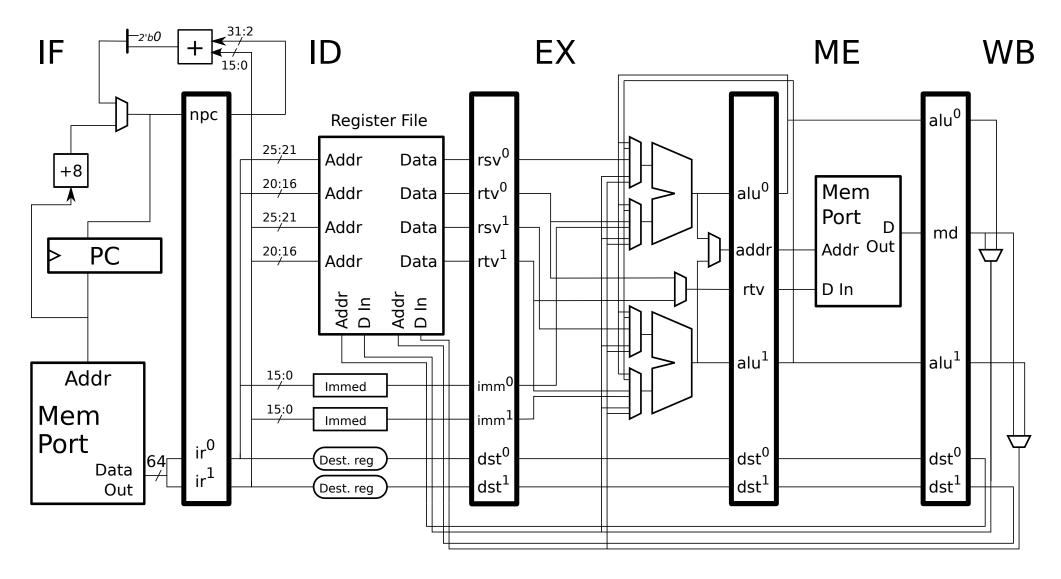

#### VLIW

## VLIW

Very-Long Instruction Word (VLIW):

An ISA or processor in which instructions are grouped into bundles which are designed to be executed as a unit.

Explicitly Parallel Instruction Computing:

Intel's version of VLIW. Here, VLIW includes EPIC.

# Key VLIW Features

Instructions grouped in bundles.

Bundles carry dependency information.

Can only branch to beginning of a bundle.

 $VLIW \gg Current Examples \gg Texas Instruments VelociTI$ 

# Current Examples

Texas Instruments VelociTI (Implemented in the C6000 Digital Signal Processor).

Intended for signal processors, which are usually embedded in other devices . . .

... and do not run general purpose code.

VLIW ≫ Current Examples ≫ Intel Itanium

Intel Itanium (née IA-64) ISA (Implemented by Itanium, Itanium 2).

Intended for general purpose use.

Never became popular, is now discontinued.

VLIW-Related Features

Instructions grouped into 128-bit bundles.

Each bundle includes three 41-bit instructions and five template bits.

Template bits specify dependency between instructions and the type of instruction in each slot.

#### Other Features

128 64-bit General [Purpose Integer] Registers

128 82-bit FP Registers

Many additional special-purpose registers.

Makes extensive use of predication.

 $VLIW \gg Current Examples \gg Cray Tera MTA$ 

Cray Tera MTA implemented by the Tera Computer Company.

(Tera bought by Cray.)

Intended for scientific computing.

VLIW-Related Features

Instructions grouped into 64-bit bundles.

Each bundle holds three instructions.

Restrictions: one load/store, one ALU, and one ALU or branch.

Bundle specifies number of following non-dependent bundles in a *lookahead* field.

Serial bit for specifying intra-bundle dependencies.

#### $VLIW \gg Current Examples \gg Cray Tera MTA$

## Other Features

Radical: Can hold up to 128 threads, does not have data cache.

Ordinary: 32 64-bit registers.

Extra bits on memory words support inter-processor synchronization.

Branches can examine any subset of 4 condition code registers.

#### VLIW ≫ VLIW Bundle and Slot Definitions

## VLIW Bundle and Slot Definitions

Bundle: a.k.a. packet

The grouping of instructions and dependency information which is handled as a unit by a VLIW processor.

#### Slot:

Place (bit positions) within a bundle for an instruction.

A typical VLIW ISA fits three instructions into a 128-bit bundle ...

... such a bundle is said to have three slots.

Example: Itanium (née IA-64)

Bundle Size, 128 bits; holds three instructions.

Slot 2		Slot 1		Slot 0		dep.	info
127	87	86	46	45	5	4	0

#### $VLIW \gg Instruction Restrictions In Bundles$

#### Instruction Restrictions In Bundles

ISA may forbid certain instructions in certain slots ...

 $\dots e.g.$ , no load/store instruction in Slot 1.

Tera-MTA: Three slots per 64-bit bundle. (Slot 0, Slot 1, Slot 2.)

Slot 0: Load/Store

Slot 1: ALU

Slot 2: ALU or Branch

Itanium (née IA-64): Three slots per 128-bit bundle.

Slot 0: Integer, memory or branch.

Slot 1: Any instruction

Slot 2: Any instruction that doesn't access memory.

There are further restrictions.

VLIW » Dependency Information in Bundles

## Dependency Information in Bundles

Common feature: Specify boundary between dependent instructions.

```
add r1, r2, r3
sub r4, r5, r6
# Boundary: because of r1 instruction below might wait.
xor r7, r1, r8
```

Because dependency information is in bundle less hardware is needed to detect dependencies.

How Dependency Information Can Be Specified (Varies by ISA):

• Lookahead:

Number of bundles before the next true dependency.

• Stop:

Next instruction depends on earlier instruction.

• Serial Bit:

If 0, no dependencies within bundle(can safely execute in any order).

VLIW » Dependency Information in Bundles » Specifying Dependencies Using Lookahead

Specifying Dependencies Using Lookahead

Used in: Tera MTA.

### Lookahead:

The number of consecutive following bundles not dependent on current bundle.

If lookahead 0, may be dependencies between current and next bundle.

If lookahead 1, no dependencies between current and next bundle, but may be dependencies between current and 2nd following bundle.

Setting the lookahead value:

Compiler analyzes dependencies in code, taking branches into account.

Sets lookahead based on nearest possible dependency.

## Lookahead Example: (Two-instruction bundles.)

```
Bundle1: add r1, r2, r3
        add r4, r5, r6
        Lookahead = 1  # Bundle 2 not dependent.
Bundle2: add r7, r7, r9
         add r10, r11, r12
        Lookahead = 2  # Bundle 3 and Bundle 1 not dependent.
Bundle3: add r2, r1, r14
        bne r20, Bundle1
        Lookahead = 0 # Bundle 1 is dependent.
Bundle4: add r18, r8, r19
        bne r21, Bundle1
        Lookahead = 11 # Assuming twelfth bundle below uses r18.
Bundle5: nop
        nop
# (Next 10 bundles contain only nops)
```

VLIW » Dependency Information in Bundles » Specifying Dependencies Using Stops

Specifying Dependencies Using Stops

```
Used by: Itanium (née IA-64)
```

### Stop:

Boundary between instructions with true dependencies and output dependencies.

Stop (and taken branches) divide instructions into groups.

Groups can span multiple bundles.

Within a group true and output register dependencies are not allowed, with minor exceptions.

Memory dependencies are allowed.

Assembler Notation (Itanium): Two consecutive semicolons: ;;.

### Example:

```
L1: add r1= r2, r3
L2: add r4= r5, r6 ;;
L3: add r7= r1, r0 ;;
L4: add r8= r7, r0
L5: add r9= r4, r0
```

VLIW  $\gg$  Dependency Information in Bundles  $\gg$  Specifying Dependencies Using Stops

! Three groups: Group 1: L1, L2; Group 2: L3; Group 3: L4, L5

#### VLIW and Superscalar Comparison

# VLIW and Superscalar Comparison

What is Being Compared

An *n*-way superscalar implementation of conventional ISA.

An n-way implementation of a VLIW ISA.

# Common Benefit

Can potentially execute n instructions per cycle.

Vector Instructions

Vector Instructions

Idea:

What if we just duplicated the functional units (such as the FP A1-A4, M1-M8) and gave each one (effectively) a register file but still just executed one instruction per cycle?

What if we could do that in a way that avoided  $O(n^2)$  bypass path cost for an n-way system?

ISA Aspects of Vector Instructions:

CPU has a set of vector registers, typically 128 to 512 bits.

Each register holds several values.

Vector instruction performs operation on each value.

### Example: (Intel-64 AVX)

#### Consider MIPS Code


```
add.s f0, f2, f4
add.s f6, f8, f10
add.s f12, f14, f16
add.s f18, f20, f22

add.s f24, f26, f28
add.s f30, f32, f34 # MIPS actually lacks f32 and greater.
add.s f36, f38, f40
add.s f42, f44, f46
```

#### Equivalent Intel-64 AVX Code

ymm0 - ymm15 are 256-bit vector registers, each holding 8 singles.

# Vector Instruction Implementation

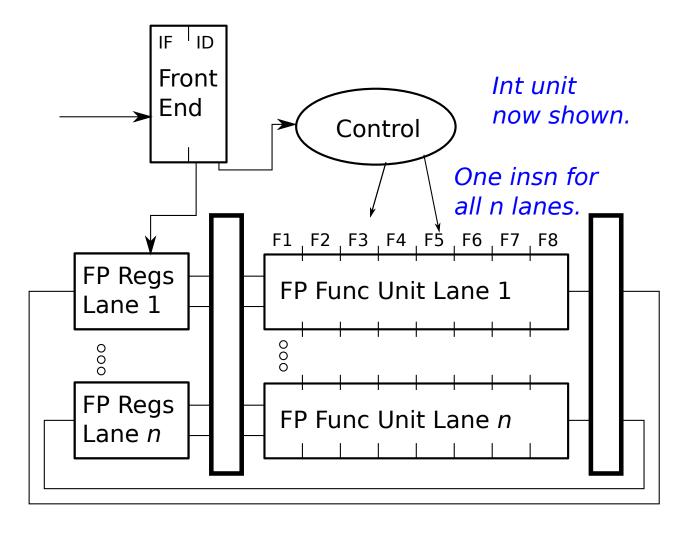

Vector Instructions  $\gg$  Vector Instruction ISA Extensions

### Vector Instruction ISA Extensions

## IA-32, Intel 64

First Vector Extension: MMX—64-bit vector registers.

SSE, SSE2-SSE4:  $16 \times 128$ -bit vector registers.

AVX, AVX2:  $16 \times 256$ -bit vector registers.

AVX512:  $32 \times 512$ -bit vector registers. Wow,  $4 \times$  the capacity of AVX2!

### ARM:

A64 Advanced SIMD:  $32 \times 128$ -bit vector registers.

A32, T16 Advanced SIMD:  $32 \times 64$ -bit vector registers.

#### Deep Pipelining

# Deep Pipelining

## Deep Pipelining:

Increasing or using a large number of stages to improve the performance.

If each stage in a base design can be divided into exactly n stages ... ... such that the critical path in the new stages is  $\frac{1}{n}$  of the base design ... ... and if pipeline latches have zero setup time ... ... then performance will be n times larger.

Deep Pipelining > Pipelining Performance

# Pipelining Performance

Let  $t_n$  denote the time or an instruction to traverse an n-stage pipe.

Let  $t_L$  denote the setup time for a pipeline latch.

The latency of an n-stage unit is then

$$t_n = t_1 + (n-1)t_L$$

and the clock frequency is

$$\phi = \left(t_L + \frac{t_1}{n}\right)^{-1};$$
 or when  $t_L \ll \frac{t_1}{n},$   $\phi \approx \frac{n}{t_1},$ 

assuming that the unit is split perfectly into n pieces.

#### Parallelism

## Parallelism

#### Parallelism:

Execution of multiple operations at the same time.

#### Serial Execution Model:

An execution model in which instructions have an exact program-determined order in which an instruction starts only after its predecessor finishes.

#### Instruction-Level Parallelism:

The parallel execution of instructions of a program in a serial execution model such that results are no different than if the instructions executed serially.